


## What you need:

- 1 x Template Piece
- 2 x Vinyl, Leather or Cork 20 cm (8") x 6 cm (2 1/2")
- 4 x Rivets
- Decovil light


1.

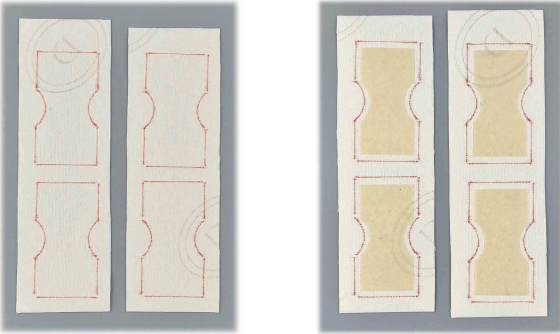

2.




3.

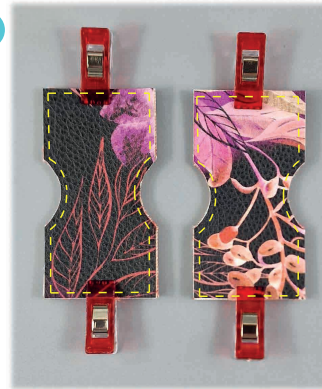

4.



1. Place the template on your fabric and draw around the edge. Do this 4 times. Do the same with the interfacing template. Iron on the Decovil light.
2. Place two of the connectors with the left side on top of each other.
3. Topstitch the Connector around the edge using a 3 mm (1/8") seam allowance.
4. Use the template and transfer the markings of the rivet holes. Punch out the holes. Mark the center on the on the straight side.

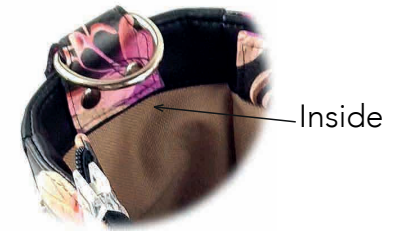

5. Mark the center of the side panel. If you have a seam in the middle, this seam is your marking (Image 5a).

6. Thread the D-ring and place the connector over the edge of the bag. The edge is there between the connector. Place the markings exactly on top of each other and draw through them to mark the position for the rivets.







7. Punch out the holes. Make sure that everything is nice and flat so that there are no waves that may form later.

8. Now you can attach the connector with rivets. Don't forget, the edge of the bag is lying BETWEEN the belt connector.

Now the shoulder strap can be attached. Complete :)



Pattern Template round. Redy to print.

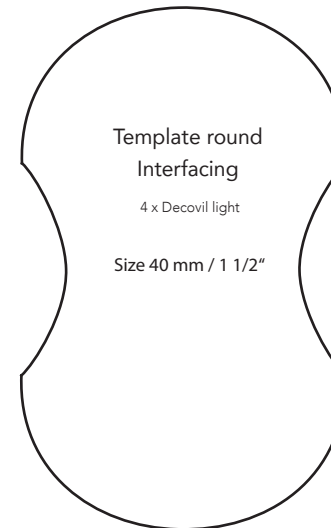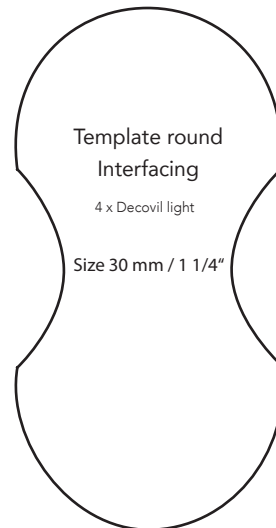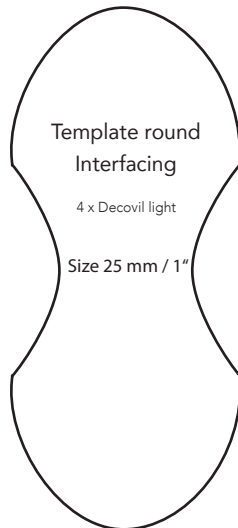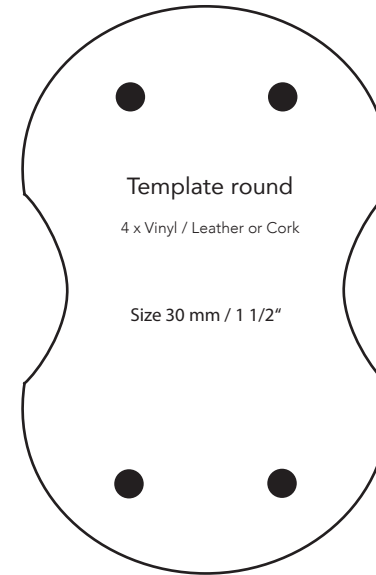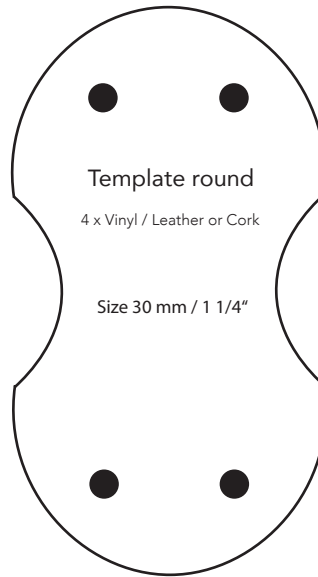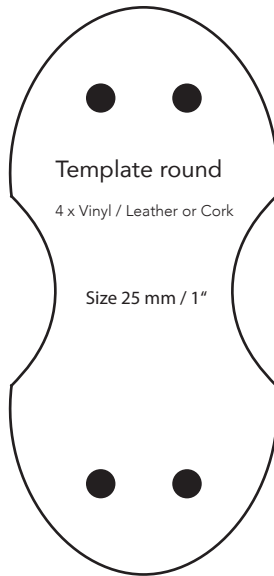

Pattern Template square. Redy to print.

